

											
Price (US/EU)	\$60.99/59€	\$99.99/88€	\$79/79€	\$99/99€	\$79/79€	\$89.95/98€	\$109.85/105€	\$129.95/135€	\$129.95/117€	\$73/46,99€	\$49.99/44,99€
Dimensions	12.6 x 9.3 x 2.5 cm	27.5 x 9.2 x 2.5 cm	15.3 x 11.5 x 0.9 cm	17.8 x 10.2 x 2.2 cm	11.6 x 7 x 4.7 cm	17.3 x 13.5 x 3.6 cm	17.3 x 14.7 x 3.6 cm	17.8 x 17 x 5.6 cm	11.4 x 8.9 x 5.1 cm	21 x 18.8 x 3.6 cm	18.3 x 12.5 x 2.4 cm
Weight	125g	250g	150g	368g	167g	368g	431g	488g	386g	390g	322g
Silent Footswitches	✓	✓	✓	✓	✗	✓	✓	✓	✗	✓	✗
Backlight	✓	✓	✗	✗	✗	✗	✓	✓	✗	✗	✗
Battery Life	75 hours	Unknown	150 hours	150 hours	150 hours	150 hours	200 hours	200 hours	150 hours	50 hours	50 hours
Power Supply	2 AAA batteries	4 AAA batteries	Built-in – Micro USB	Built-in – Micro USB	Built-in – 9V DC in	2 AA Batteries	2 AA Batteries or Micro USB	2 AA Batteries or Micro USB	9V battery or 9V DC in	Built-in – Micro USB	Built-in – Micro USB
Reset Option¹	✗	✗	✓	✓	✓	✓	✓	✓	✗	✓	✓
Repeat Function²	✗	✗	✓	✓	✓	✗	✓	✓	✓	✓	✓
Information Type	External Keyboard	MIDI	External Keyboard or MIDI	External Keyboard or MIDI	External Keyboard or MIDI	External Keyboard	External Keyboard	External Keyboard	External Keyboard	External Keyboard	External Keyboard
Airdirect³	✗	✗	✓	✓	✓	✗	✗	✗	✗	✗	✗
Single Identifier⁴	✗	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗
Connectivity	Bluetooth	Bluetooth	Bluetooth	Bluetooth	Bluetooth	Bluetooth	Bluetooth + Micro USB	Bluetooth + Micro USB	Bluetooth	Bluetooth	Bluetooth
Customizable Controls	✗	✓	✓	✓	✓	✗	✓	✓	✗	✗	✗
Number of Modes⁵	3	3	7	7	7	3	5	5	4	5	5
Warranty	1 year	1 year	1 year	1 year	1 year	1 year	1 year	1 year	1 year	30 days	30 days

¹ A reset option is useful to pair the pedal to a new device without having to manually disconnect it from the original device

² The repeat function allows one to turn several pages quickly with a long press of the footswitch

³ Available only on Airturn pedals, the Airdirect mode allows one to connect the pedal directly in Newzik, without having to go to the device settings

⁴ When pedals have a unique identifier displayed in the Bluetooth settings of the device, it makes it much more convenient in group settings when pedals can sometimes get mixed up

⁵ Modes are presets assigned to the footswitches that trigger different actions (e.g. page left/right, page up/down, etc.)